


AirStream

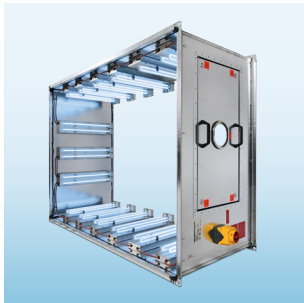

AirStream

Integrated module for air disinfection in air-conditioning and ventilation systems, for new projects and retrofitting in existing systems, module made from galvanised metal plate, aluminium or optionally stainless steel, UV-C emitters with a special interior coating of the quartz glass for a long service life with a low irradiation fall-off, number and rating of UV-C emitters dependent on the required air flow rate

UV-C technology

Number of emitters	project-related
Emitter type	289503A(T)
Emitter power	95 W
Protection rating . Protection class	IP 20 . I
Emitter service life	9,000 h

Unit geometry


Width	300-2,500 mm
Length	1,060 mm
Height	300-1,060 mm

Performance data

Supply voltage	230 V
Frequency	50-60 Hz
Power consumption	project-related

Accessories . Options

- UV-C emitter with Teflon sheath
- Light trap

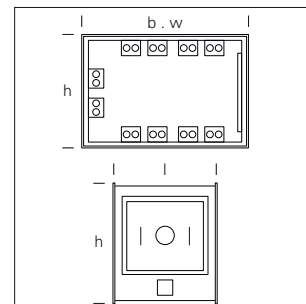

Areas of deployment

Air supply and recirculating air systems up to air humidity of 95% and a room temperature of -15° to 40°C

Project planning

Each module is individually designed for the existing or planned ventilation system and precisely customised in terms of performance and dimensions