


# AirTube C

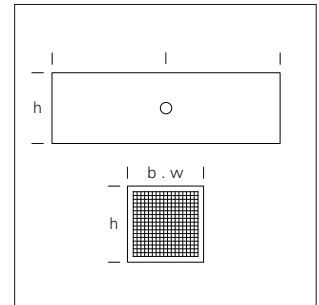

## 890295ATC

incl. UV-C compact emitter

## 890295TATC

incl. UV-C compact emitter with Teflon

## 890295ATC-F

incl. UV-C compact emitter and filter

## 890295TATC-F

incl. UV-C compact emitter with Teflon sheath and filter

Air disinfection unit especially for small rooms, module for ceiling mounting, consisting of disinfection chamber, fan and radiation traps, housing made from stainless steel 1.4301, brushed exterior, UV-C emitter with special interior coating of the quartz glass for long service life with low irradiation fall-off, optional UV-C emitter with Teflon sheath and filter

## UV-C technology

Number of emitters	2
Emitter type	289503A(T)
Emitter power	2 x 95 W
UV-C output	64 W
Protection rating . Protection class	IP 20 . I
Emitter service life	9,000 h

## Areas of deployment

Store and production rooms

## Unit geometry

Width	260 mm
Length without . with filter	1,100 . 1,140 mm
Height	263 mm
Weight	19.5 kg

## Project planning

Number of units to be used depends on room size and application

## Performance data

Supply voltage	230 V
Frequency	50-60 Hz
Power consumption	240 W
Air flow rate without . with filter	300 m <sup>3</sup> /h . 230 m <sup>3</sup> /h

## Note

Can be used in working rooms without any impairment of the people in the rooms

## Accessories . Options

- UV-C emitter with Teflon sheath
- Filter
- Suspension cable