

AirCom O2

UV-C TECHNOLOGY

Number of emitters	4
Emitter type	289503A
Emitter power	95 W
UV-C output	128 W
Protection rating . Protection class	IP20 . I
Emitter service life	9,000 h

UNIT GEOMETRY

Width without . with casters	430 . 580 mm
Depth without . with casters	265 . 570 mm
Height without . with casters	1,640 . 1,730 mm
Weight without . with casters	45.0 . 48.0 kg

PERFORMANCE DATA


Power consumption	530 W
Supply voltage	230 V
Frequency	50-60 Hz
Nominal volume flow and noise level	Stage 1 130 m ³ /h . 40 dB (A)
	Stage 2 190 m ³ /h . 41 dB (A)
	Stage 3 220 m ³ /h . 46 dB (A)

ACCESSORIES . OPTIONS

Caster AirCom O2

ORDER NUMBER

AirCom O2 895495 9999001

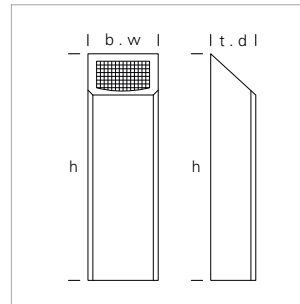

Air disinfection unit for office rooms and doctors' surgeries for wall mounting or as a mobile stand-alone unit, consisting of an air disinfection chamber, fan, micro-filter for pre-cleansing and activated carbon filter, housing made of sheet steel, powder-coated RAL 9010, UV-C emitter with special interior coating of the quartz glass for a long service life with low irradiation fall-off

Areas of deployment: Office rooms and doctors' surgeries

Project planning: Number of units to be used depends on room size and application

Advice: Can be used in working rooms without any impairment of the people in the rooms

All data are typical values, system features may change with product improvements due to technical advances, errors excepted