
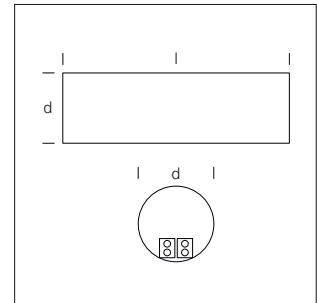


AirTube

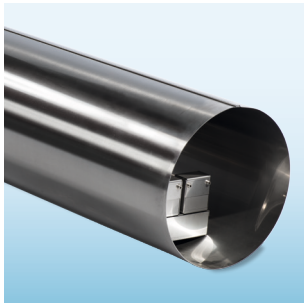

890260AT

incl. UV-C compact emitter

890260TAT

incl. UV-C compact emitter with Teflon sheath

Air disinfection unit for rooms with integrated evaporators, ceiling mounting, placement directly in front of the evaporator air outlet for disinfection of a partial airflow, housing made of stainless steel 1.4301, UV-C emitter with special interior coating of the quartz glass for long service life with low irradiation fall-off, optional UV-C emitter with Teflon sheath

UV-C technology

Number of emitters	2
Emitter type	28600A(T)
Emitter power	2 x 60 W
UV-C output	38 W
Protection rating . Protection class	IP 20 . I
Emitter service life	9,000 h

Areas of deployment

Store rooms with evaporator coolers

Unit geometry

Length	1,000 mm
Diameter	250 mm
Weight	9.2 kg

Project planning

Number of units to be used depends on the evaporators deployed in the store room

Performance data

Supply voltage	230 V
Frequency	50-60 Hz
Power consumption	140 W

Note

The unit emits UV-C radiation, which is why it needs to be switched off before entering the room

Accessories . Options

UV-C emitter with Teflon sheath