

UV-C-SurTech S

UV-C TECHNOLOGY

Number of emitters	2
Emitter type . Emitter power	366003 . 2 x 60 W
Protection rating . Protection class	IP 55 . I
Emitter service life	4,000 h

UNIT GEOMETRY

Width	150 mm
Length	530 mm
Height	111 mm
Weight	7.5 kg

PERFORMANCE DATA


Power consumption	140 W
Supply voltage	230 V
Frequency	50-60 Hz
Irradiated area width	107 mm
Irradiated area length	365 mm

ACCESSORIES . OPTIONS

Breakage detector
Bearings

ORDER NUMBER

UV-C-SurTech S	892260-10
	with breakage detector
	892260-20
	without breakage detector

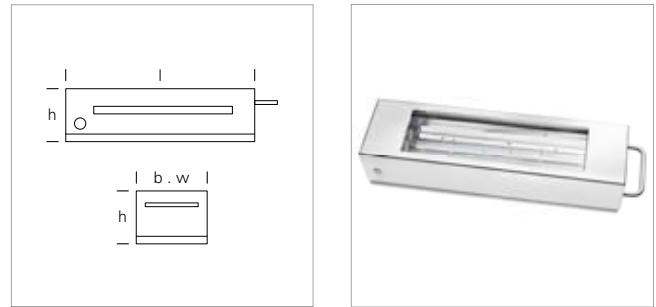

UV-C radiation cassette, protected against water splashes, housing made from stainless steel 1.4301, UV-C emitter with special interior coating of the quartz glass for long service life with low irradiation fall-off, separate electronic ballast, optional insert frame for mounting the cassette (IP 55)

Areas of deployment: Surface disinfection for conveyor belts and packaging, filling and sealing machines

Advice: All data are typical values, system features may change with product improvements due to technical advances, errors excepted