




CIR high speed print drying cuts energy bill

By using carbon infrared (CIR) emitters from Heraeus Noblelight to achieve the rapid print drying demanded by their high speed print heads, The Lettershop Group, of Leeds has achieved significant savings in energy and running costs compared with their previous short wave infrared system. As it is air-cooled rather than water-cooled, the new drying system has also allowed further operational benefits in terms of reduced maintenance, easier cleaning and less downtime.

Since installation, all four systems have proved extremely efficient, providing annual energy savings of around £30,000 on each line. They have also required very little maintenance, as cleaning now takes around two to three hours compared with the two days of the short wave system and their original lamps are still functioning perfectly after nearly two years. In addition to saving considerable space, as there is no need for the equipment required for water cooling, the new systems are also proving more tolerant of sensitive papers, as the paper temperature for the CIR system is just 30 - 35°C, as opposed to the 60-70°C of the previous short wave system. Removing the requirements for water-cooling also has a health and safety benefit as it eliminates the potential of personnel being burnt by the hot water pipes.

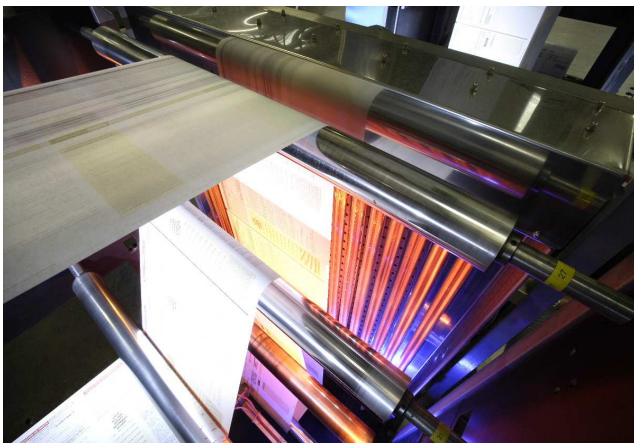

Features

- Energy savings of around £30,000
- CIR heaters with a longer life time than short wave heaters in the near infrared region
- little maintenance necessary
- air cooling

Technical Data

- medium wave Carbon heaters CIR
- total power density of 140 kW/m²

Germany
Heraeus Noblelight GmbH
 Industrial Process Technology
 Reinhard-Heraeus-Ring 7
 63801 Kleinostheim, Germany
 Phone +49(0)6181.35-8545
 Fax +49(0)6181.35-168545
 hng-infrared@heraeus.com
 www.heraeus-noblelight.com

USA
Heraeus Noblelight LLC
 1520C Broadmoor Blvd.
 30518 Buford, GA
 Tel: +1 678 835 5764
 Fax: +1 678 835 5765
 info@noblelight.net
 www.noblelight.net

Great Britain
Heraeus Noblelight Ltd.
 Unit 1 Millennium Court, Clayhill
 Industrial Estate, Buildwas Road
 Neston, Cheshire, CH64 3UZ
 Phone +44(151)353-2710
 Fax +44(151)353-2719
 ian.bartley@heraeus.com
 www.heraeus-noblelight.com

China
Heraeus Noblelight GmbH
 Room502, 5F, Building 16, No.99,
 Tianzhou Road Shanghai, China
 Post code: 200233
 Phone +86 21-54452255
 Fax +86 21-54452410
 info.hns@heraeus.com
 www.heraeus-noblelight.com