




## Infrared helps automatic plastic welding

An infrared welding system using special-purpose infrared emitters from Heraeus Noblelight has helped Hepworth Drainage to improve the quality of an inspection chamber assembly production process, while eliminating any environmental problems associated with a hot melt adhesive technique that was formerly used. Hepworth Drainage is one of the largest manufacturers of drainage systems. One of its major product lines is a polypropylene inspection chamber, which provides access to inspect below ground drainage systems from the surface. This product consists of a base unit offering multiple connections to clay or plastic drainage systems. The addition of two or four raising pieces creates the required depth of inspection chamber. An important step in the manufacturing process is the joining of the raising pieces, first to the base unit of the inspection chamber and then to each other as required.

This was formerly done using a hot melt adhesive. Modern environmental protection requirements and, not least, the requirement for cost-saving, led the British company to investigate potentially more efficient solutions. A complex automated process with a robot which brings the various component tubes into an infrared welding cell and welds them together, now takes only 22 seconds. As a result, the production cycle times for plastic inspection chambers at Hepworth have been significantly reduced and the quality of the components significantly increased. Moreover, the new heating process is environmentally-friendly as, in contrast to the previous hot melt adhesive system, there is very little fume production.

These process improvements have also been made possible because quartz glass emitters can be shaped to match the product three-dimensionally. Consequently, the heat is generated only where it is required. In addition, infrared emitters need to be switched on whenever the heat is actually needed, so that energy is saved.

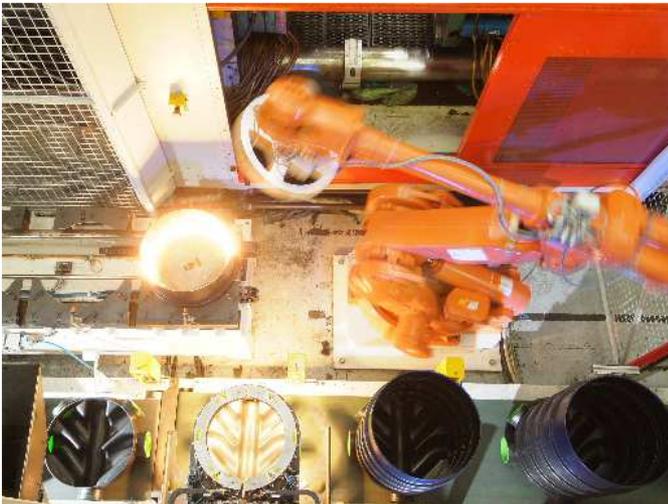

### Features

- welding of plastic pipes with a base unit
- energy efficient
- time saving
- contact free heating is environmentally friendly

### Technical Data

- small custom-designed, short wave emitters,
- each delivering 15W/mm,
- distributed around the product surface
- cycle times of around 22 seconds

Germany  
**Heraeus Noblelight GmbH**  
 Infrared Process Technology  
 Reinhard-Heraeus-Ring 7  
 63801 Kleinostheim  
 Phone +49 6181 35-8545  
 Fax +49 6181 35 16-8410  
 hng-infrared@heraeus.com  
 www.heraeus-noblelight.com/infrared

USA  
**Heraeus Noblelight America LLC**  
 1520C Broadmoor Blvd.  
 Buford, GA 30518  
 Phone +1 678 835-5764  
 Fax: +1 678 835-5765  
 info.hna.ip@heraeus.com  
 www.heraeus-thermal-solutions.com

Great Britain  
**Heraeus Noblelight Ltd.**  
 Clayhill Industrial Estate  
 Neston, Cheshire  
 CH64 3UZ  
 Phone +44 151 353-2710  
 Fax +44 151 353-2719  
 ian.bartley@heraeus.com  
 www.heraeus-infraredsolutions.co.uk

China  
**Heraeus Noblelight (Shenyang) LTD**  
 2F, 5th Building 5  
 No. 406, Guilin Rd, Xuhui District  
 200233 Shanghai  
 Phone +8621 3357-5555  
 Fax +8621 3357-5333  
 info.hns@heraeus.com  
 www.heraeus-noblelight.cn